


# CONFIGURATION GUIDE

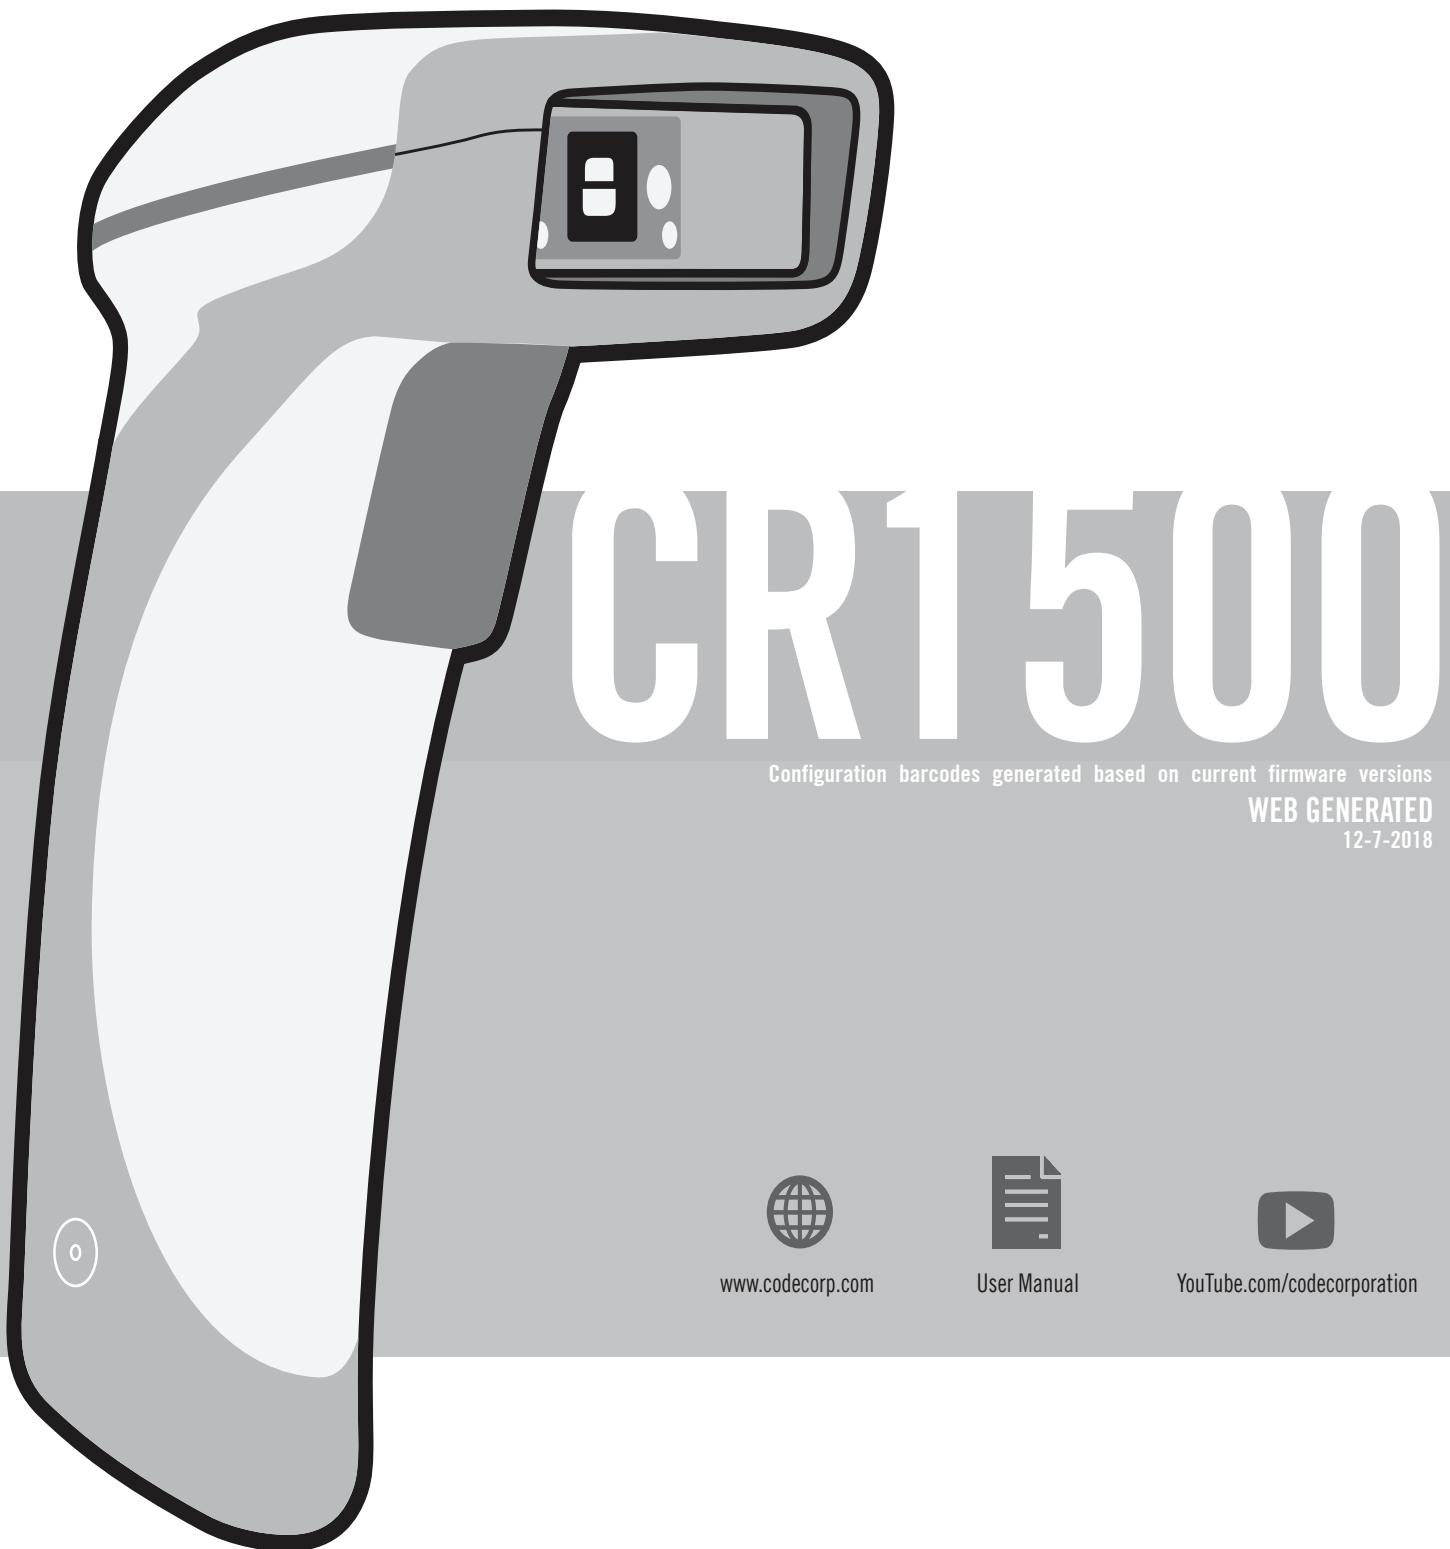

[www.codecorp.com](http://www.codecorp.com)



User Manual



[YouTube.com/codecorporation](https://YouTube.com/codecorporation)

**code**  
ADVANCED BARCODE READERS

# Table of Contents

<b>General Reading Mode Settings.....</b>	<b>8-9</b>
Continuous Scan Mode On.....	8 (A2)
Motion Detect/Continuous Scan Off (Out of Stand) - Default.....	8 (A3)
Motion Detect Always On.....	8 (A4)
500ms Motion Detection Delay - Default.....	8 (B1)
Enable Cell Phone Reading Enhancement.....	8 (B2)
Disable Cell Phone Reading Enhancement - Default.....	8 (B3)
Set Motion Detect Maximum Brightness to 25%.....	8 (B4)
Set Motion Detect Maximum Brightness to 50%.....	8 (C1)
Set Motion Detect Maximum Brightness to 75%.....	8 (C2)
Set Motion Detect Maximum Brightness to 100% - Default.....	8 (C3)
Enable Target LED During Image Capture - Default.....	8 (C4)
Disable Target LED During Image Capture.....	8 (D1)
Motion Detection On In Stand - Default.....	8 (D2)
Enable Stand Detection - Default.....	8 (D3)
Reader Text Commands Off - Default.....	8 (D4)
Reader Text Commands On.....	8 (E1)
Beep On Vibrate On - Default.....	8 (E2)
Beep Off Vibrate On.....	8 (E3)
Beep On Vibrate Off.....	8 (E4)
Beep Off Vibrate Off.....	9 (A1)
Targeting On - Default.....	9 (A2)
Enable Targeting-Always-On.....	9 (A3)
Beep Volume 0%.....	9 (A4)
Beep Volume 33%.....	9 (B1)
Beep Volume 67%.....	9 (B2)
Beep Volume 100% - Default.....	9 (B3)
<b>Data Formatting (Prefix/Suffix) Settings.....</b>	<b>9-10</b>
Disable Data Formatting - Default.....	9 (C2)
Prefix Comma.....	9 (C3)
Prefix Space.....	9 (C4)
Prefix Tab (USB Keyboard Mode Only).....	9 (D1)
Prefix Tab (RS232 Mode Only).....	9 (D2)
Erase Prefix Data.....	9 (D3)
Suffix Comma.....	9 (D4)
Suffix Space.....	9 (E1)
Suffix Enter (USB Keyboard Mode Only) - Default.....	9 (E2)
Suffix Tab (USB Keyboard Mode Only).....	9 (E3)
Suffix Tab (RS232 Mode Only).....	9 (E4)
Suffix Carriage Return (RS232 Mode Only).....	10 (A1)
Suffix Carriage Return Line Feed (RS232 Mode Only) - Default.....	10 (A2)
Suffix Line Feed (RS232 Mode Only).....	10 (A3)
Erase Suffix Data.....	10 (A4)
Convert Barcode Data to Uppercase.....	10 (B1)
Convert Barcode Data to Lowercase.....	10 (B2)
Convert Barcode Data to Bracketed Hex Output.....	10 (B3)
Erase Prefix & Suffix Data.....	10 (B4)
Prefix AIM ID Off - Default.....	10 (C1)
Prefix AIM ID On.....	10 (C2)
<b>Symbology Settings.....</b>	<b>10-19</b>
Australian Post On.....	10 (C4)
Australian Post Off - Default.....	10 (D1)
Aztec On - Default.....	10 (D2)
Aztec Off.....	10 (D3)
Aztec Inverse & Normal On.....	10 (D4)
Aztec Inverse Off - Default.....	10 (E1)
Enable BC412 - Disable BC412 Reverse.....	10 (E2)
Disable BC412 Regular and Reverse - Default.....	10 (E3)
Canada Post On.....	10 (E4)



## Table of Contents

Canada Post Off - Default.....	11 (A1)
Reverse BC412 On.....	11 (A2)
Codabar On - Default.....	11 (A3)
Reverse BC412 Off - Default.....	11 (A4)
Codabar Off.....	11 (B1)
Codabar Checksum On.....	11 (B2)
Codabar Checksum Off - Default.....	11 (B3)
Remove Codabar Start and Stop Delimiters.....	11 (B4)
Keep Codabar Start and Stop Delimiters - Default.....	11 (C1)
Codablock F On.....	11 (C2)
Codablock F Off - Default.....	11 (C3)
Code 11 Checksum Stripped from Result On.....	11 (C4)
Code 11 Checksum Stripped from Result Off - Default.....	11 (D1)
Code 11 On.....	11 (D2)
Code 11 Off - Default.....	11 (D3)
Code 11 One Digit Checksum.....	11 (D4)
Code 11 Disable Checksum Checking - Default.....	11 (E1)
Code 11 Two Digit Checksum - Default.....	11 (E2)
Code 49 On.....	11 (E3)
Code 49 Off - Default.....	11 (E4)
Code 128 Off.....	12 (A1)
Code 128 On - Default.....	12 (A2)
Code 32 (Italian Pharmacode) On.....	12 (A3)
Code 32 (Italian Pharmacode) Off - Default.....	12 (A4)
Code 39 On - Default.....	12 (B1)
Code 39 Off.....	12 (B2)
Code 39 Checksum On.....	12 (B3)
Code 39 Checksum Off - Default.....	12 (B4)
Code 39 Checksum Stripped from Result On.....	12 (C1)
Code 93 On - Default.....	12 (C2)
Code 93 Off.....	12 (C3)
Composite On.....	12 (C4)
Composite Off - Default.....	12 (D1)
Data Matrix On - Default.....	12 (D2)
Data Matrix Off.....	12 (D3)
Data Matrix Mirror On.....	12 (D4)
Data Matrix Mirror Off - Default.....	12 (E1)
Data Matrix Inverse and Normal On - Default.....	12 (E2)
Data Matrix Inverse Off.....	12 (E3)
Data Matrix Rectangular On - Default.....	12 (E4)
Data Matrix Rectangular Off.....	13 (A1)
Data Matrix Rectangular Extended On.....	13 (A2)
Data Matrix Rectangular Extended Off - Default.....	13 (A3)
Grid Matrix On.....	13 (A4)
Grid Matrix Off - Default.....	13 (B1)
GS1 DataBar On - Default.....	13 (B2)
GS1 DataBar Off.....	13 (B3)
Han Xin On.....	13 (B4)
Han Xin Off - Default.....	13 (C1)
Han Xin Mirror On.....	13 (C2)
Han Xin Mirror Off - Default.....	13 (C3)
Han Xin Inverse On.....	13 (C4)
Han Xin Inverse Off - Default.....	13 (D1)
Hong Kong 2 of 5 On.....	13 (D2)
Hong Kong 2 of 5 Off - Default.....	13 (D3)
Interleaved 2 of 5 On - Default.....	13 (D4)
Interleaved 2 of 5 Off.....	13 (E1)
Interleaved 2 of 5 Checksum On.....	13 (E2)
Interleaved 2 of 5 Checksum Off - Default.....	13 (E3)
Interleaved 2 of 5 Checksum Stripped from Result On.....	13 (E4)
Interleaved 2 of 5 Checksum Stripped from Result Off - Default.....	14 (A1)



## Table of Contents

Japan Post On.....	14 (A2)
Japan Post Off - Default.....	14 (A3)
KIX (Dutch Post) On.....	14 (A4)
KIX (Dutch Post) Off - Default.....	14 (B1)
Korean Post On.....	14 (B2)
Korean Post Off - Default.....	14 (B3)
Matrix 2 of 5 On.....	14 (B4)
Matrix 2 of 5 Off - Default.....	14 (C1)
Maxicode On.....	14 (C2)
Maxicode Off - Default.....	14 (C3)
Micro PDF417 On.....	14 (C4)
Micro PDF417 Off - Default.....	14 (D1)
Micro QR Code On.....	14 (D2)
Micro QR Code Off - Default.....	14 (D3)
Mode 1 QR Code On.....	14 (D4)
Mode 1 QR Code Off - Default.....	14 (E1)
MSI Plessey Checksum Must Be Mod 10.....	14 (E2)
MSI Plessey Checksum Off - Default.....	14 (E3)
MSI Plessey Checksum Stripped from Result On.....	14 (E4)
MSI Plessey Checksum Stripped from Result Off - Default.....	15 (A1)
MSI Plessey Checksum Must Be Mod 11/10.....	15 (A2)
MSI Plessey Checksum Must Be Mod 10/10.....	15 (A3)
MSI Plessey On.....	15 (A4)
MSI Plessey Off - Default.....	15 (B1)
NEC 2 of 5 Checksum On - Default.....	15 (B2)
NEC 2 of 5 Checksum Off.....	15 (B3)
NEC 2 of 5 On.....	15 (B4)
NEC 2 of 5 Off - Default.....	15 (C1)
PDF417 On - Default.....	15 (C2)
PDF417 Off.....	15 (C3)
Pharmacode On.....	15 (C4)
Pharmacode Off - Default.....	15 (D1)
Pharmacode Normal Barcode Decoding (Left to Right) - Default.....	15 (D2)
Pharmacode Reverse Barcode Decoding (Right to Left).....	15 (D3)
QR Code On - Default.....	15 (D4)
QR Code Off.....	15 (E1)
QR Code Standard Only - Default.....	15 (E2)
QR Code Mirror On.....	15 (E3)
QR Code Mirror Off - Default.....	15 (E4)
QR Code Inverse and Normal On.....	16 (A1)
QR Code Inverse Only.....	16 (A2)
Telepen On.....	16 (A3)
Telepen Off - Default.....	16 (A4)
Output Telepen as Numeric - Default.....	16 (B1)
Output Telepen as ASCII.....	16 (B2)
Trioptic On.....	16 (B3)
Trioptic Off - Default.....	16 (B4)
Reverse Trioptic On.....	16 (C1)
Reverse Trioptic Off - Default.....	16 (C2)
Keep Trioptic Start and Stop Delimiters.....	16 (C3)
Remove Trioptic Start and Stop Delimiters - Default.....	16 (C4)
Straight 2 of 5 Off - Default.....	16 (D1)
Straight 2 of 5 On.....	16 (D2)
UK Plessey On.....	16 (D3)
UK Plessey Off - Default.....	16 (D4)
UK Royal Mail On.....	16 (E1)
UK Royal Mail Off - Default.....	16 (E2)
UPC/EAN On - Default.....	16 (E3)
UPC/EAN Off.....	16 (E4)
UPC Supplemental On.....	17 (A1)
UPC Supplemental Off - Default.....	17 (A2)



# Table of Contents

UPC E Expansion On.....	17 (A3)
UPC E Expansion Off - Default.....	17 (A4)
Convert UPC-A to EAN-13.....	17 (B1)
Do Not Convert UPC-A to EAN-13 - Default.....	17 (B2)
Transmit UPC-A Check Digit.....	17 (B3)
Do Not Transmit UPC-A Check Digit - Default.....	17 (B4)
Transmit UPC-A Number System.....	17 (C1)
Do Not Transmit UPC-A Number System - Default.....	17 (C2)
Do Not Transmit UPC-E Check Digit - Default.....	17 (C3)
Transmit UPC-E Number System.....	17 (C4)
Do Not Transmit UPC-E Number System - Default.....	17 (D1)
Convert EAN-8 to EAN-13.....	17 (D2)
Do Not Convert EAN-8 to EAN-13 - Default.....	17 (D3)
Transmit UPC-E Check Digit.....	17 (D4)
Convert Bookland EAN-13 to ISBN.....	17 (E1)
Do Not Convert Bookland EAN-13 to ISBN - Default.....	17 (E2)
Convert Bookland EAN-13 to ISSN.....	17 (E3)
Do Not Convert Bookland EAN-13 to ISSN - Default.....	17 (E4)
Transmit EAN-8 Check Digit.....	18 (A1)
Do Not Transmit EAN-8 Check Digit - Default.....	18 (A2)
Transmit EAN-13 Check Digit.....	18 (A3)
Do Not Transmit EAN-13 Check Digit - Default.....	18 (A4)
UPU ID Tags On.....	18 (B1)
UPU ID Tags Off - Default.....	18 (B2)
USPS Intelligent Mail On.....	18 (B3)
USPS Intelligent Mail Off - Default.....	18 (B4)
USPS Planet On.....	18 (C1)
USPS Planet Off - Default.....	18 (C2)
USPS Postnet On.....	18 (C3)
USPS Postnet Off - Default.....	18 (C4)
Enable GS1 DataBar Limited - Default.....	18 (D1)
Disable GS1 DataBar Limited.....	18 (D2)
Enable GS1 DataBar Expanded Stacked - Default.....	18 (D3)
Disable GS1 DataBar Expanded Stacked.....	18 (D4)
Enable GS1 DataBar Expanded - Default.....	18 (E1)
Disable GS1 DataBar Expanded.....	18 (E2)
Enable GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional - Default.....	18 (E3)
Disable GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional.....	18 (E4)
Grid Matrix Inverse On.....	19 (A1)
Grid Matrix Inverse Off - Default.....	19 (A2)
Grid Matrix Mirror On.....	19 (A3)
BC412 On.....	19 (A4)
BC412 Off - Default.....	19 (B1)
Disable GS1 DataBar Omnidirectional and GS1 DataBar Truncated.....	19 (B2)
Grid Matrix Mirror Off - Default.....	19 (B3)
Royal Mail Checksum On.....	19 (B4)
Royal Mail Checksum Off.....	19 (C1)
Pharmacode Color On.....	19 (C2)
Pharmacode Color Off - Default.....	19 (C3)
Custom QR Code On.....	19 (C4)
Custom QR Code Off - Default.....	19 (D1)
Han Xin Normal and Inverse On.....	19 (D2)
Aztec Mirror On.....	19 (D3)
Aztec Mirror Off - Default.....	19 (D4)
Code 39 Extended Full ASCII Off - Default.....	19 (E1)
Code 39 Extended Full ASCII On.....	19 (E2)
Enable GoCode & GoCode Mirror Decoding.....	19 (E3)
<b>Keyboard Language Settings.....</b>	<b>20-21</b>
Set Portuguese for Windows as active language.....	20 (A2)
Set Italian for Windows as active language.....	20 (A3)



## Table of Contents

Keyboard Support: Simplified Chinese Keyboard Mapping for Windows.....	20 (A4)
List Installed Languages.....	20 (B1)
Get Active Language.....	20 (B2)
Keyboard Support: US English Keyboard Mapping for Windows - Default.....	20 (B3)
Keyboard Support: English Keyboard Mapping for Apple.....	20 (B4)
Keyboard Support: French-Belgian Keyboard Mapping for Windows.....	20 (C1)
Keyboard Support: French Keyboard Mapping for Windows.....	20 (C2)
Keyboard Support: French Keyboard Mapping for Apple.....	20 (C3)
Keyboard Support: German Keyboard Mapping for Apple.....	20 (C4)
Keyboard Support: German Keyboard Mapping for Windows.....	20 (D1)
Keyboard Support: German-Swiss Keyboard Mapping for Apple.....	20 (D2)
Keyboard Support: German-Swiss Keyboard Mapping for Windows.....	20 (D3)
Keyboard Support: Italian Keyboard Mapping for Apple.....	20 (D4)
Keyboard Support: Japanese Keyboard Mapping for Windows.....	20 (E1)
Keyboard Support: Russian Keyboard Mapping for Windows.....	20 (E2)
Keyboard Support: Spanish-Latin American Keyboard Mapping for Windows.....	20 (E3)
Keyboard Support: Spanish Keyboard Mapping for Windows.....	20 (E4)
Keyboard Support: Spanish Keyboard Mapping for Apple.....	21 (A1)
Keyboard Support: UK English Keyboard Mapping for Windows.....	21 (A2)
Keyboard Support: US International (Universal) Keyboard Mapping for Windows.....	21 (A3)
Data Encoding: Raw ASCII to Keyboard XML File Lookup - Default.....	21 (A4)
Data Encoding: UTF8 to Unicode Codepoint - Alt Sequences for Windows.....	21 (B1)
Data Encoding: ASCII to Unicode Codepoint - Alt Sequences for Windows.....	21 (B2)
Control Character Input - Language Default - Default - Default.....	21 (B3)
Control Character Input - Ctrl + Character.....	21 (B4)
Control Character Input - Alt + Keypad.....	21 (C1)
Control Character Input -Alt + Leading Zero.....	21 (C2)
<b>Operating System Settings.....</b>	<b>21</b>
Alternate Operating System (Linux/Mac) On.....	21 (C4)
Alternate Operating System (Linux/Mac) Off - Default.....	21 (D1)
<b>USB Settings.....</b>	<b>21-22</b>
USB HID Vendor Mode.....	21 (D3)
USB Keyboard Mode - Default.....	21 (D4)
Enable HID POS Mode.....	21 (E1)
Enable CDC VCOM Mode.....	21 (E2)
Enable USB VCOM mode.....	21 (E3)
Enable USB OPOS/JPOS Mode - Default.....	21 (E4)
USB Virtual COM Multiple Ports.....	22 (A1)
USB Virtual COM Common Ports.....	22 (A2)
<b>RS232 Settings.....</b>	<b>22-23</b>
Reset to RS232 Factory Defaults.....	22 (A4)
RS232 Interface - 1200 Baud Rate.....	22 (B1)
RS232 Interface - 2400 Baud Rate.....	22 (B2)
RS232 Interface - 4800 Baud Rate.....	22 (B3)
RS232 Interface - 9600 Baud Rate.....	22 (B4)
RS232 Interface - 19200 Baud Rate.....	22 (C1)
RS232 Interface - 38400 Baud Rate.....	22 (C2)
RS232 Interface - 57600 Baud Rate.....	22 (C3)
RS232 Interface - 115200 Baud Rate - Default.....	22 (C4)
RS232 Interface - 7 Data Bits.....	22 (D1)
RS232 Interface - 8 Data Bits - Default.....	22 (D2)
RS232 Interface - 1 Stop Bit - Default.....	22 (D3)
RS232 Interface - 2 Stop Bits.....	22 (D4)
RS232 Interface - Even Parity.....	22 (E1)
RS232 Interface - No Parity.....	22 (E2)
RS232 Interface - Odd Parity.....	22 (E3)
RS232 Interface Flow Control On.....	22 (E4)
RS232 Interface Flow Control Off - Default.....	23 (A1)



## Table of Contents

Enable Packet Mode.....	23 (A2)
Enable Raw Mode - Default.....	23 (A3)
Enable Serial, Raw, and Echo Communications.....	23 (A4)
Enable RS232 OPOS/JPOS Mode - Default.....	23 (B1)
Enable RS232 Interface Flow Control - One-Way.....	23 (B2)
<b>Scan Delay Settings.....</b>	<b>23</b>
Disable Duplicate Scan Delay - Default.....	23 (B4)
1 Second Duplicate Scan Delay.....	23 (C1)
2 Second Duplicate Scan Delay.....	23 (C2)
3 Second Duplicate Scan Delay.....	23 (C3)
5 Second Duplicate Scan Delay.....	23 (C4)
10 Second Duplicate Scan Delay.....	23 (D1)
30 Second Duplicate Scan Delay.....	23 (D2)
1 Hour Duplicate Scan Delay.....	23 (D3)
1 Day Duplicate Scan Delay.....	23 (D4)
<b>Miscellaneous Settings.....</b>	<b>23</b>
Enable Upload Image Mode.....	23 (E2)
Disable Upload Image Mode - Default.....	23 (E3)
<b>Reader/Modem Command Settings.....</b>	<b>24</b>
Reader Information, limited, 1500.....	24 (A2)
<b>Reset, Clear and Save Reader Settings.....</b>	<b>24</b>
Reset to Factory Defaults.....	24 (A4)
Save All Reader Settings.....	24 (B1)
Reboot Reader.....	24 (B2)
<b>Custom Terminal Settings.....</b>	<b>24</b>
Enable Verifone (Ruby) Defaults.....	24 (B4)
Enable Gilbarco.....	24 (C1)
Disable Gilbarco - Default.....	24 (C2)
Enable NCR.....	24 (C3)
Disable NCR - Default.....	24 (C4)
Enable NCR2.....	24 (D1)
Disable NCR2 - Default.....	24 (D2)
Disable WINCNIX - Default.....	24 (D3)
Enable WINCNIX.....	24 (D4)
<b>Data Validation.....</b>	<b>24</b>
Enable UDI/HIBC Validation.....	24 (E2)
Enable ISO15434 Validation.....	24 (E3)
Enable ISO15434 & ISO15418 Validation.....	24 (E4)



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

General Reading Mode Settings	Continuous Scan Mode On	Motion Detect/Continuous Scan Off (Out of Stand) - Default	Motion Detect Always On
	 M20224_01	 M20200_01	 M20199_01
	A2	A3	A4
500ms Motion Detection Delay - Default   M20228_03	Enable Cell Phone Reading Enhancement   M20240_03	Disable Cell Phone Reading Enhancement - Default   M20241_02	Set Motion Detect Maximum Brightness to 25%   M20247_01
	B1	B2	B3
Set Motion Detect Maximum Brightness to 50%   M20246_01	Set Motion Detect Maximum Brightness to 75%   M20245_01	Set Motion Detect Maximum Brightness to 100% - Default   M20244_01	Enable Target LED During Image Capture - Default   M20294_01
	C1	C2	C3
Disable Target LED During Image Capture   M20295_01	Motion Detection On In Stand - Default   M20297_02	Enable Stand Detection - Default   M20302_01	Reader Text Commands Off - Default   M20325_01
	D1	D2	D3
Reader Text Commands On   M20326_01	Beep On Vibrate On - Default   M20329_01	Beep Off Vibrate On   M20330_01	Beep On Vibrate Off   M20331_01
	E1	E2	E3
			E4

# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

Beep Off Vibrate Off   M20332_01	Targeting On - Default   M20333_02	Enable Targeting-Always-On   M20334_02	Beep Volume 0%   M20339_01
A1	A2	A3	A4
Beep Volume 33%   M20340_01	Beep Volume 67%   M20341_01	Beep Volume 100% - Default   M20342_01	Intentionally Blank
B1	B2	B3	B4
<b>Data Formatting (Prefix/Suffix) Settings</b>		Disable Data Formatting - Default   M20223_02	Prefix Comma   M20209_01
C1	C2	C3	C4
Prefix Tab (USB Keyboard Mode Only)   M20218_02	Prefix Tab (RS232 Mode Only)   M20211_01	Erase Prefix Data   M20207_01	Suffix Comma   M20215_01
D1	D2	D3	D4
Suffix Space   M20216_01	Suffix Enter (USB Keyboard Mode Only) - Default   M20219_02	Suffix Tab (USB Keyboard Mode Only)   M20220_02	Suffix Tab (RS232 Mode Only)   M20217
E1	E2	E3	E4

# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

Suffix Carriage Return (RS232 Mode Only)	Suffix Carriage Return Line Feed (RS232 Mode Only) - Default	Suffix Line Feed (RS232 Mode Only)	Erase Suffix Data
 M20212_01	 M20213_01	 M20214_01	 M20208_01
A1	A2	A3	A4
Convert Barcode Data to Uppercase	Convert Barcode Data to Lowercase	Convert Barcode Data to Bracketed Hex Output	Erase Prefix & Suffix Data
 M20221_01	 M20222_01	 M20255_02	 M20322_01
B1	B2	B3	B4
Prefix AIM ID Off - Default	Prefix AIM ID On	<b>Symbology Settings</b>	
 M20343_01	 M20344_01	 M20000_01	
C1	C2	<b>C4</b>	
Australian Post Off - Default	Aztec On - Default	Aztec Off	Aztec Inverse & Normal On
 M20001_01	 M20002_01	 M20003_01	 M20004_01
D1	D2	D3	D4
Aztec Inverse Off - Default	Enable BC412 - Disable BC412 Reverse	Disable BC412 Regular and Reverse - Default	Canada Post On
 M20005_01	 M20259_02	 M20260_02	 M20008_01
E1	E2	E3	E4



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

Canada Post Off - Default   M20009_01	Reverse BC412 On   M20261_01	Codabar On - Default   M20010_01	Reverse BC412 Off - Default   M20262_02
A1	A2	A3	A4
Codabar Off   M20011_01	Codabar Checksum On   M20012_01	Codabar Checksum Off - Default   M20013_01	Remove Codabar Start and Stop Delimiters   M20014_01
B1	B2	B3	B4
Keep Codabar Start and Stop Delimiters - Default   M20015_01	Codablock F On   M20018_01	Codablock F Off - Default   M20019_01	Code 11 Checksum Stripped from Result On   M20022_01
C1	C2	C3	C4
Code 11 Checksum Stripped from Result Off - Default   M20023_01	Code 11 On   M20020_01	Code 11 Off - Default   M20021_01	Code 11 One Digit Checksum   M20032_01
D1	D2	D3	D4
Code 11 Disable Checksum Checking - Default   M20031_01	Code 11 Two Digit Checksum - Default   M20033_01	Code 49 On   M20263_01	Code 49 Off - Default   M20264_01
E1	E2	E3	E4

# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

Code 128 Off   M20035_01  <b>A1</b>	Code 128 On - Default   M20034_01  <b>A2</b>	Code 32 (Italian Pharmacode) On   M20024_01  <b>A3</b>	Code 32 (Italian Pharmacode) Off - Default   M20025_01  <b>A4</b>
Code 39 On - Default   M20026_01  <b>B1</b>	Code 39 Off   M20027_01  <b>B2</b>	Code 39 Checksum On   M20028_01  <b>B3</b>	Code 39 Checksum Off - Default   M20029_01  <b>B4</b>
Code 39 Checksum Stripped from Result On   M20030_01  <b>C1</b>	Code 93 On - Default   M20265_01  <b>C2</b>	Code 93 Off   M20266_01  <b>C3</b>	Composite On   M20036_01  <b>C4</b>
Composite Off - Default   M20037_01  <b>D1</b>	Data Matrix On - Default   M20038_02  <b>D2</b>	Data Matrix Off   M20039_01  <b>D3</b>	Data Matrix Mirror On   M20042_01  <b>D4</b>
Data Matrix Mirror Off - Default   M20043_01  <b>E1</b>	Data Matrix Inverse and Normal On - Default   M20040_01  <b>E2</b>	Data Matrix Inverse Off   M20041_01  <b>E3</b>	Data Matrix Rectangular On - Default   M20044_01  <b>E4</b>



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

Data Matrix Rectangular Off   M20045_01  <b>A1</b>	Data Matrix Rectangular Extended On   M20046_01  <b>A2</b>	Data Matrix Rectangular Extended Off - Default   M20047_01  <b>A3</b>	Grid Matrix On   M20048_01  <b>A4</b>
Grid Matrix Off - Default   M20049_01  <b>B1</b>	GS1 DataBar On - Default   M20050_02  <b>B2</b>	GS1 DataBar Off   M20051_02  <b>B3</b>	Han Xin On   M20052_01  <b>B4</b>
Han Xin Off - Default   M20053_01  <b>C1</b>	Han Xin Mirror On   M20056_01  <b>C2</b>	Han Xin Mirror Off - Default   M20057_01  <b>C3</b>	Han Xin Inverse On   M20054_01  <b>C4</b>
Han Xin Inverse Off - Default   M20055_01  <b>D1</b>	Hong Kong 2 of 5 On   M20058_01  <b>D2</b>	Hong Kong 2 of 5 Off - Default   M20059_01  <b>D3</b>	Interleaved 2 of 5 On - Default   M20060_01  <b>D4</b>
Interleaved 2 of 5 Off   M20061_01  <b>E1</b>	Interleaved 2 of 5 Checksum On   M20062_01  <b>E2</b>	Interleaved 2 of 5 Checksum Off - Default   M20063_01  <b>E3</b>	Interleaved 2 of 5 Checksum Stripped from Result On   M20064_01  <b>E4</b>



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

Interleaved 2 of 5 Checksum Stripped from Result Off - Default   M20077_01	Japan Post On   M20065_01	Japan Post Off - Default   M20066_01	KIX (Dutch Post) On   M20067_01
KIX (Dutch Post) Off - Default   M20068_01	Korean Post On   M20069_01	Korean Post Off - Default   M20070_01	Matrix 2 of 5 On   M20071_01
Matrix 2 of 5 Off - Default   M20072_01	Maxicode On   M20073_01	Maxicode Off - Default   M20074_01	Micro PDF417 On   M20090_01
Micro PDF417 Off - Default   M20091_01	Micro QR Code On   M20103_01	Micro QR Code Off - Default   M20104_01	Mode 1 QR Code On   M20105_01
Mode 1 QR Code Off - Default   M20106_01	MSI Plessey Checksum Must Be Mod 10   M20079_01	MSI Plessey Checksum Off - Default   M20078_01	MSI Plessey Checksum Stripped from Result On   M20082_01



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

MSI Plessey Checksum Stripped from Result Off - Default   M20083_01  <b>A1</b>	MSI Plessey Checksum Must Be Mod 11/10   M20081_02  <b>A2</b>	MSI Plessey Checksum Must Be Mod 10/10   M20080_02  <b>A3</b>	MSI Plessey On   M20075_01  <b>A4</b>
MSI Plessey Off - Default   M20076_01  <b>B1</b>	NEC 2 of 5 Checksum On - Default   M20086_01  <b>B2</b>	NEC 2 of 5 Checksum Off   M20087_01  <b>B3</b>	NEC 2 of 5 On   M20084_01  <b>B4</b>
NEC 2 of 5 Off - Default   M20085_01  <b>C1</b>	PDF417 On - Default   M20088_01  <b>C2</b>	PDF417 Off   M20089_01  <b>C3</b>	Pharmacode On   M20092_01  <b>C4</b>
Pharmacode Off - Default   M20093_01  <b>D1</b>	Pharmacode Normal Barcode Decoding (Left to Right) - Default   M20095_01  <b>D2</b>	Pharmacode Reverse Barcode Decoding (Right to Left)   M20094_01  <b>D3</b>	QR Code On - Default   M20096_01  <b>D4</b>
QR Code Off   M20097_01  <b>E1</b>	QR Code Standard Only - Default   M20098_01  <b>E2</b>	QR Code Mirror On   M20101_01  <b>E3</b>	QR Code Mirror Off - Default   M20102_01  <b>E4</b>



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

QR Code Inverse and Normal On   M20100_01	QR Code Inverse Only   M20099_01	Telepen On   M20109_01	Telepen Off - Default   M20110_01
A1	A2	A3	A4
Output Telepen as Numeric - Default   M20117_01	Output Telepen as ASCII   M20116_01	Trioptic On   M20118_01	Trioptic Off - Default   M20119_01
B1	B2	B3	B4
Reverse Trioptic On   M20120_01	Reverse Trioptic Off - Default   M20121_01	Keep Trioptic Start and Stop Delimiters   M20122_01	Remove Trioptic Start and Stop Delimiters - Default   M20123_01
C1	C2	C3	C4
Straight 2 of 5 Off - Default   M20108_01	Straight 2 of 5 On   M20107_01	UK Plessey On   M20287_01	UK Plessey Off - Default   M20288_01
D1	D2	D3	D4
UK Royal Mail On   M20124_01	UK Royal Mail Off - Default   M20125_01	UPC/EAN On - Default   M20126_01	UPC/EAN Off   M20127_01
E1	E2	E3	E4

# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

UPC Supplemental On	UPC Supplemental Off - Default	UPC E Expansion On	UPC E Expansion Off - Default
 M20128_01	 M20129_01	 M20132_01	 M20133_01
<b>A1</b>	<b>A2</b>	<b>A3</b>	<b>A4</b>
Convert UPC-A to EAN-13	Do Not Convert UPC-A to EAN-13 - Default	Transmit UPC-A Check Digit	Do Not Transmit UPC-A Check Digit - Default
 M20134_01	 M20135_01	 M20140_01	 M20141_01
<b>B1</b>	<b>B2</b>	<b>B3</b>	<b>B4</b>
Transmit UPC-A Number System	Do Not Transmit UPC-A Number System - Default	Do Not Transmit UPC-E Check Digit - Default	Transmit UPC-E Number System
 M20142_01	 M20143_01	 M20145_01	 M20146_01
<b>C1</b>	<b>C2</b>	<b>C3</b>	<b>C4</b>
Do Not Transmit UPC-E Number System - Default	Convert EAN-8 to EAN-13	Do Not Convert EAN-8 to EAN-13 - Default	Transmit UPC-E Check Digit
 M20147_01	 M20130_01	 M20131_01	 M20144_01
<b>D1</b>	<b>D2</b>	<b>D3</b>	<b>D4</b>
Convert Bookland EAN-13 to ISBN	Do Not Convert Bookland EAN-13 to ISBN - Default	Convert Bookland EAN-13 to ISSN	Do Not Convert Bookland EAN-13 to ISSN - Default
 M20136_01	 M20137_01	 M20138_01	 M20139_01
<b>E1</b>	<b>E2</b>	<b>E3</b>	<b>E4</b>



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

Transmit EAN-8 Check Digit	Do Not Transmit EAN-8 Check Digit - Default	Transmit EAN-13 Check Digit	Do Not Transmit EAN-13 Check Digit - Default
 M20148_01	 M20149_01	 M20150_01	 M20151_01
A1	A2	A3	A4
UPU ID Tags On	UPU ID Tags Off - Default	USPS Intelligent Mail On	USPS Intelligent Mail Off - Default
 M20152_01	 M20153_01	 M20154_01	 M20155_01
B1	B2	B3	B4
USPS Planet On	USPS Planet Off - Default	USPS Postnet On	USPS Postnet Off - Default
 M20156_01	 M20157_01	 M20158_01	 M20159_01
C1	C2	C3	C4
Enable GS1 DataBar Limited - Default	Disable GS1 DataBar Limited	Enable GS1 DataBar Expanded Stacked - Default	Disable GS1 DataBar Expanded Stacked
 M20277_01	 M20278_01	 M20275_01	 M20276_01
D1	D2	D3	D4
Enable GS1 DataBar Expanded - Default	Disable GS1 DataBar Expanded	Enable GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional - Default	Disable GS1 DataBar Stacked and GS1 DataBar Stacked Omnidirectional
 M20273_01	 M20274_01	 M20271_01	 M20272_01
E1	E2	E3	E4



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

Grid Matrix Inverse On   M20281_01  <b>A1</b>	Grid Matrix Inverse Off - Default   M20282_01  <b>A2</b>	Grid Matrix Mirror On   M20283_02  <b>A3</b>	BC412 On   M20006_01  <b>A4</b>
BC412 Off - Default   M20007_01  <b>B1</b>	Disable GS1 DataBar Omnidirectional and GS1 DataBar Truncated   M20268_01  <b>B2</b>	Grid Matrix Mirror Off - Default   M20284_02  <b>B3</b>	Royal Mail Checksum On   M20285_01  <b>B4</b>
Royal Mail Checksum Off   M20286_01  <b>C1</b>	Pharmacode Color On   M20289_01  <b>C2</b>	Pharmacode Color Off - Default   M20290_01  <b>C3</b>	Custom QR Code On   M20291_01  <b>C4</b>
Custom QR Code Off - Default   M20292_01  <b>D1</b>	Han Xin Normal and Inverse On   M20304_01  <b>D2</b>	Aztec Mirror On   M20318_01  <b>D3</b>	Aztec Mirror Off - Default   M20319_01  <b>D4</b>
Code 39 Extended Full ASCII Off - Default   M20320_02  <b>E1</b>	Code 39 Extended Full ASCII On   M20321_02  <b>E2</b>	Enable GoCode & GoCode Mirror Decoding   M20357_01  <b>E3</b>	Intentionally Blank  <b>E4</b>

# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

<b>Keyboard Language Settings</b>	Set Portuguese for Windows as active language   M20364_01	Set Italian for Windows as active language   M20363_01	Keyboard Support: Simplified Chinese Keyboard Mapping for Windows   M20362_01
	A2	A3	A4
List Installed Languages   M20180_01	Get Active Language   M20179_01	Keyboard Support: US English Keyboard Mapping for Windows - Default   M20182_01	Keyboard Support: English Keyboard Mapping for Apple   M20184_01
	B1	B2	B3
Keyboard Support: French-Belgian Keyboard Mapping for Windows   M20181_01	Keyboard Support: French Keyboard Mapping for Windows   M20185_01	Keyboard Support: French Keyboard Mapping for Apple   M20186_01	Keyboard Support: German Keyboard Mapping for Apple   M20187_01
	C1	C2	C3
Keyboard Support: German Keyboard Mapping for Windows   M20188_01	Keyboard Support: German-Swiss Keyboard Mapping for Apple   M20189_01	Keyboard Support: German-Swiss Keyboard Mapping for Windows   M20190_01	Keyboard Support: Italian Keyboard Mapping for Apple   M20191_01
	D1	D2	D3
Keyboard Support: Japanese Keyboard Mapping for Windows   M20192_01	Keyboard Support: Russian Keyboard Mapping for Windows   M20194_01	Keyboard Support: Spanish-Latin American Keyboard Mapping for Windows   M20193_01	Keyboard Support: Spanish Keyboard Mapping for Windows   M20195_01
	E1	E2	E3
			E4



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

<p>Keyboard Support: Spanish Keyboard Mapping for Apple</p>  <p>M20196_01</p> <p><b>A1</b></p>	<p>Keyboard Support: UK English Keyboard Mapping for Windows</p>  <p>M20197_01</p> <p><b>A2</b></p>	<p>Keyboard Support: US International (Universal) Keyboard Mapping for Windows</p>  <p>M20198_01</p> <p><b>A3</b></p>	<p>Data Encoding: Raw ASCII to Keyboard XML File Lookup - Default</p>  <p>M20203_01</p> <p><b>A4</b></p>
<p>Data Encoding: UTF8 to Unicode Codepoint - Alt Sequences for Windows</p>  <p>M20204_01</p> <p><b>B1</b></p>	<p>Data Encoding: ASCII to Unicode Codepoint - Alt Sequences for Windows</p>  <p>M20205_01</p> <p><b>B2</b></p>	<p>Control Character Input - Language Default - Default - Default</p>  <p>M20350_01</p> <p><b>B3</b></p>	<p>Control Character Input - Ctrl + Character</p>  <p>M20351_01</p> <p><b>B4</b></p>
<p>Control Character Input - Alt + Keypad</p>  <p>M20352_01</p> <p><b>C1</b></p>	<p>Control Character Input -Alt + Leading Zero</p>  <p>M20353_01</p> <p><b>C2</b></p>	<p><b>Operating System Settings</b></p>	<p>Alternate Operating System (Linux/Mac) On</p>  <p>M20305_01</p> <p><b>C4</b></p>
<p>Alternate Operating System (Linux/Mac) Off - Default</p>  <p>M20306_01</p> <p><b>D1</b></p>	<p><b>USB Settings</b></p>	<p>USB HID Vendor Mode</p>  <p>M20177_01</p> <p><b>D3</b></p>	<p>USB Keyboard Mode - Default</p>  <p>M20178_01</p> <p><b>D4</b></p>
<p>Enable HID POS Mode</p>  <p>M20225_01</p> <p><b>E1</b></p>	<p>Enable CDC VCOM Mode</p>  <p>M20226_01</p> <p><b>E2</b></p>	<p>Enable USB VCOM mode</p>  <p>M20250_01</p> <p><b>E3</b></p>	<p>Enable USB OPOS/JPOS Mode - Default</p>  <p>M20307_01</p> <p><b>E4</b></p>

# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

<p>USB Virtual COM Multiple Ports</p>  <p>M20346_01</p> <p><b>A1</b></p>	<p>USB Virtual COM Common Ports</p>  <p>M20347_01</p> <p><b>A2</b></p>	<p><b>RS232 Settings</b></p>	<p>Reset to RS232 Factory Defaults</p>  <p>M20112_01</p> <p><b>A4</b></p>
<p>RS232 Interface - 1200 Baud Rate</p>  <p>M20160_01</p> <p><b>B1</b></p>	<p>RS232 Interface - 2400 Baud Rate</p>  <p>M20161_01</p> <p><b>B2</b></p>	<p>RS232 Interface - 4800 Baud Rate</p>  <p>M20162_01</p> <p><b>B3</b></p>	<p>RS232 Interface - 9600 Baud Rate</p>  <p>M20163_01</p> <p><b>B4</b></p>
<p>RS232 Interface - 19200 Baud Rate</p>  <p>M20164_01</p> <p><b>C1</b></p>	<p>RS232 Interface - 38400 Baud Rate</p>  <p>M20165_01</p> <p><b>C2</b></p>	<p>RS232 Interface - 57600 Baud Rate</p>  <p>M20166_01</p> <p><b>C3</b></p>	<p>RS232 Interface - 115200 Baud Rate - Default</p>  <p>M20167_01</p> <p><b>C4</b></p>
<p>RS232 Interface - 7 Data Bits</p>  <p>M20168_01</p> <p><b>D1</b></p>	<p>RS232 Interface - 8 Data Bits - Default</p>  <p>M20169_01</p> <p><b>D2</b></p>	<p>RS232 Interface - 1 Stop Bit - Default</p>  <p>M20170_01</p> <p><b>D3</b></p>	<p>RS232 Interface - 2 Stop Bits</p>  <p>M20171_01</p> <p><b>D4</b></p>
<p>RS232 Interface - Even Parity</p>  <p>M20172_01</p> <p><b>E1</b></p>	<p>RS232 Interface - No Parity</p>  <p>M20173_01</p> <p><b>E2</b></p>	<p>RS232 Interface - Odd Parity</p>  <p>M20174_01</p> <p><b>E3</b></p>	<p>RS232 Interface Flow Control On</p>  <p>M20175_01</p> <p><b>E4</b></p>

# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

<p>RS232 Interface Flow Control Off - Default</p>  <p>M20176_01</p> <p><b>A1</b></p>	<p>Enable Packet Mode</p>  <p>M20238_01</p> <p><b>A2</b></p>	<p>Enable Raw Mode - Default</p>  <p>M20239_01</p> <p><b>A3</b></p>	<p>Enable Serial, Raw, and Echo Communications</p>  <p>M20115_01</p> <p><b>A4</b></p>
<p>Enable RS232 OPOS/JPOS Mode - Default</p>  <p>M20308_01</p> <p><b>B1</b></p>	<p>Enable RS232 Interface Flow Control - One-Way</p>  <p>M20309_01</p> <p><b>B2</b></p>	<p><b>Scan Delay Settings</b></p>	<p>Disable Duplicate Scan Delay - Default</p>  <p>M20229_01</p> <p><b>B4</b></p>
<p>1 Second Duplicate Scan Delay</p>  <p>M20230_01</p> <p><b>C1</b></p>	<p>2 Second Duplicate Scan Delay</p>  <p>M20231_01</p> <p><b>C2</b></p>	<p>3 Second Duplicate Scan Delay</p>  <p>M20232_01</p> <p><b>C3</b></p>	<p>5 Second Duplicate Scan Delay</p>  <p>M20233_01</p> <p><b>C4</b></p>
<p>10 Second Duplicate Scan Delay</p>  <p>M20234_01</p> <p><b>D1</b></p>	<p>30 Second Duplicate Scan Delay</p>  <p>M20235_01</p> <p><b>D2</b></p>	<p>1 Hour Duplicate Scan Delay</p>  <p>M20236_01</p> <p><b>D3</b></p>	<p>1 Day Duplicate Scan Delay</p>  <p>M20237_01</p> <p><b>D4</b></p>
<p><b>Miscellaneous Settings</b></p>	<p>Enable Upload Image Mode</p>  <p>M20242_01</p> <p><b>E2</b></p>	<p>Disable Upload Image Mode - Default</p>  <p>M20243_01</p> <p><b>E3</b></p>	<p>Intentionally Blank</p> <p><b>E4</b></p>



# CR1500 Configuration Guide

*NOTE: Configuration changes will take effect immediately and be saved to memory*

<b>Reader/Modem Command Settings</b>	<b>Reader Information, limited, 1500</b>   M20361_01	<b>Reset, Clear and Save Reader Settings</b>   M20111_01	<b>Reset to Factory Defaults</b>   M20293_03
	<b>A2</b>  <b>Save All Reader Settings</b>   M20335_01	<b>B2</b>  <b>Reboot Reader</b>   M20345_01	<b>A4</b>  <b>Enable Verifone (Ruby) Defaults</b>   M20293_03
<b>C1</b>  <b>Enable Gilbarco</b>   M20310_02	<b>C2</b>  <b>Disable Gilbarco - Default</b>   M20311_02	<b>C3</b>  <b>Enable NCR</b>   M20312_01	<b>C4</b>  <b>Disable NCR - Default</b>   M20313_01
	<b>D1</b>  <b>Enable NCR2</b>   M20314_01	<b>D2</b>  <b>Disable NCR2 - Default</b>   M20315_01	<b>D3</b>  <b>Disable WINCNIX - Default</b>   M20316_01
<b>E1</b>  <b>Data Validation</b>	<b>E2</b>  <b>Enable UDI/HIBC Validation</b>   M20256_02	<b>E3</b>  <b>Enable ISO15434 Validation</b>   M20257_01	<b>E4</b>  <b>Enable ISO15434 &amp; ISO15418 Validation</b>   M20258_01

